



DEPTH

Installation Instructions

TOOLS NEEDED

- Drill
- 1/4" Drill Bit
- Phillips Head Screw Driver
- Level
- Tape Measure
- Pencil
- Safety Gloves
- Safety Goggles

PREPARE YOUR GLASSBOARD DEPTH

1. Follow uncrating instructions found on the exterior of your crate
1. Carefully remove brown paper guiding template. This will be used to guide the installation of your Depth Glassboard.

HANG GUIDING TEMPLATE

1. Tape paper guiding template to wall in desired location
2. Assure the Top Label is pointing up while mounting template
3. Once template is hung, level the top of the template
4. Drill holes using the 1/4" bit in the center of each circle on template

INSTALL MOUNTING HARDWARE **Fig. A**

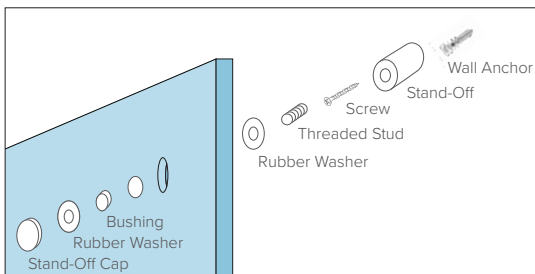


Fig. A

1. Remove guiding template
2. Install drywall anchors
3. Install stainless steel standoff hardware firmly into wall anchor

HANG GLASSBOARD DEPTH **Fig. B**

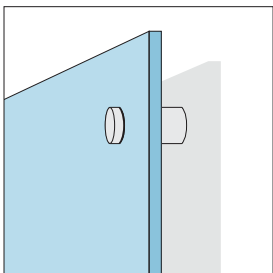


Fig. B

1. Insert threaded studs into standoff hardware
2. Properly place protective washers and bushings onto threaded stud
3. Carefully place Glassboard onto threaded studs so that glass rests on protective bushings
4. Install protective washers and fasten standoff caps by hand. *Do not over-tighten caps.*
5. Now you're ready to collaborate!