



WALL2WALL

Installation Instructions — Metric

PROVIDED HARDWARE



Fig. A



Fig. B

- L-Channel (**Fig. A**)
Used to support the bottom horizontal edge of your Wall2Wall glass.
- T-Trim (**Fig. B**)
Used to provide consistency in vertical spacing for the application of multiple Wall2Wall glass panels, if applicable.

SUGGESTED ADHESIVES



Fig. C



Fig. D

- Loctite® PL Premium® FAST GRAB Polyurethane Construction Adhesive (**Fig. C**)
- Extreme E6000 Polyether Moisture Cure Premium Adhesive & Sealant (**Fig. D**)

INSTALLATION

1. Apply L-Channel to wall to ensure panels will be level.
2. Apply structural glazing tape (*not provided*) to perimeter of glass for support during curing phase of adhesive.
3. Apply construction grade adhesive (*see suggested adhesives above*) in a consistent pattern to the back of each glass panel, ensuring adhesive will not bleed out from behind the panel.
4. Peel backer from glazing tape and place glass onto drywall.
5. Slide T-Trim under the edge of the panel, so the adjoining panel will be properly spaced if adjoining multiple panels.
6. Repeat this process until all panels have been installed.
7. Determine if additional bracing is recommended by reading the instructions on adhesive (**Fig. E**).

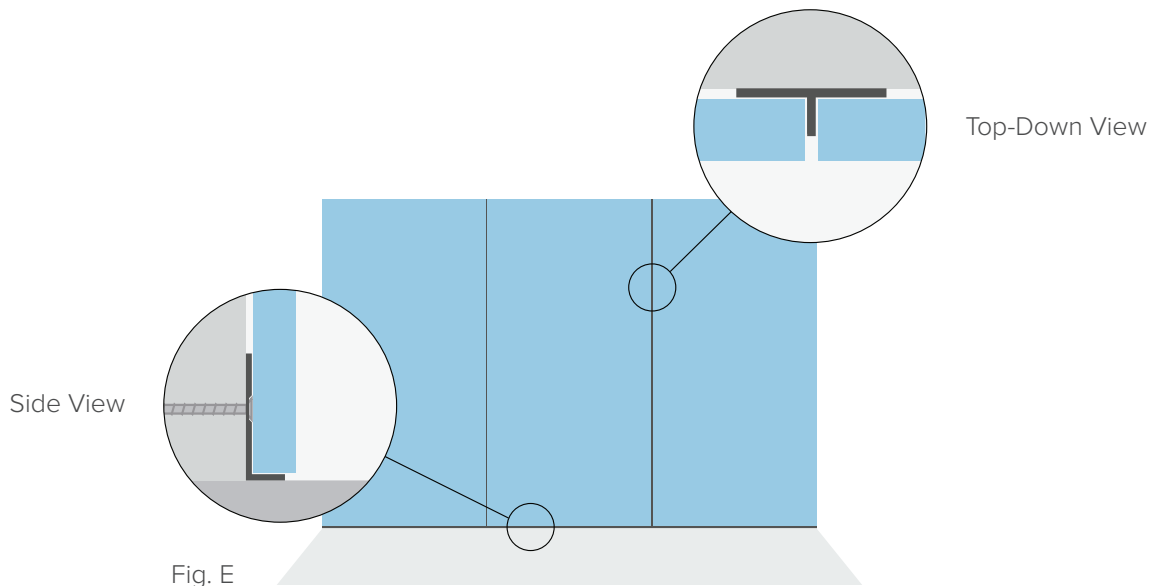


Fig. E